

HOW TO READ YOUR WATER METER



The Water Utility will read your water meter for billing purposes, but **should you wish to monitor your own consumption**, here's how:

- ◆ Shine a flashlight over the flashlight icon (located on the register) to activate the LCD display *
- ◆ Take a reading at a set time of the day
- ◆ Take a 2nd reading at the same time the next day
- ◆ The difference between the two readings is your daily water consumption

* Note: when the register display is first activated via a flashlight, all icons will be briefly displayed followed by firmware information. The register display will then toggle (every 4 seconds) displaying the reading and then the flow rate. The flow rate is per minute. When the display indicates "RATE", the flow rate is being displayed.

Leak Indicator

Displays a possible leak

- ◆ **OFF** – indicates no leaks
- ◆ **Flashing** – water usage for more than 50% of time in 24 hour period
- ◆ **Continuous ON** – there is most likely a leak in your home



The LCD figure displays your meter reading in cubic metres. The last 4 digits are decimal points. (e.g. – 26.3987 cubic metres) (decimal will be displayed)

Flow Indicator

Displays direction of water flow

- ◆ **ON** – water in use
- ◆ **OFF** – water not in use
- ◆ **Flashing** – water is running slowly
- ◆ **(-)** - indicates reverse flow
- ◆ **(+)** – indicates forward flow